

THE SUREFIRE NO-HASSLE GUARANTEE

We'll do what it takes to keep your SureFire gear running smoothly. SureFire warrants that if you — our customer — purchase one of our products, and we determine that it is defective in material and/or workmanship during your lifetime, we will repair or replace it — no hassle!

Our warranty does not cover consumables or normal wear-and-tear — things like batteries draining, headbands and headpads wearing out, ink cartridges running out, and switches wearing out — or damage resulting from abuse, alterations, unauthorized repairs, or use contrary to SureFire's user manuals.

Should you need a replacement product, SureFire reserves the right to replace an obsolete product with a current production, like model. In the event that any issue with a SureFire product is not covered under this warranty SureFire can arrange to have the product repaired for a reasonable fee.

STANDARD DISCLAIMER

Except as specified above or prohibited by applicable law: all express or implied conditions and warranties, including, without limitation, any implied warranty or condition of merchantability or fitness for a particular purpose, or accuracy of any informational content, are hereby excluded and disclaimed by SureFire; and in no event will SureFire be liable for any special, direct, indirect, consequential, incidental or punitive damages howsoever arising and regardless of the theory of liability, even if advised of the possibility of such damages. Products, prices, availability, specifications, and offers are subject to change or cancellation at any time without notice.

WARRANTY CLAIMS

For claims, contact Customer Service at 714-545-9444 to obtain a Return Merchandise Authorization number (RMA#). Then package the unit carefully and send to (no CODs):

SureFire, LLC.
Repairs Department, RMA# _____
17680 Newhope Street, Suite B
Fountain Valley, CA 92708

SureFire will pay any reasonable shipping costs to return the unit to you.



18300 MT. BALDY CIRCLE
FOUNTAIN VALLEY, CA 92708-6122
SUREFIRE.COM




Revision D 8-2018
71-01-1025
DBR

SUREFIRE

GUARDIAN®

RECHARGEABLE ULTRA-HIGH DUAL-BEAM LED FLASHLIGHT
DBR

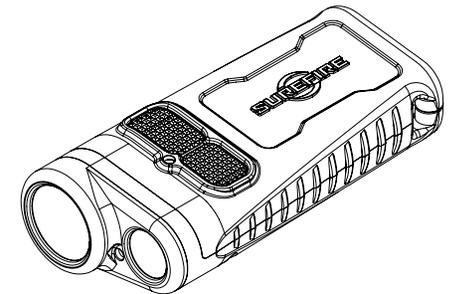

Specifications	DBR
Output 19mm	High: 800 Med: 250 Low: 15 lumens
Output 12mm	High: 1000 Med: 300 Low: 15 lumens
Intensity	12,900 candela
Runtime 19mm	High: 2.75 Med: 4.25 Low: 60 hours
Runtime 12mm	High: 2.5 Med: 4.25 Low: 62 hours
Weight	4.7 oz (133 g)
Length	4.35 in (11 cm)
Bezel Diameter	19mm Reflector: 1.15 in (2.92 cm) 12mm Reflector: 0.90 in (2.29 cm)


All performance claims tested to ANSI/NEMA FL1-2009 Standard.

USER MANUAL

GUARDIAN

KIT CONTENTS

- GUARDIAN
- 10 inch USB-C to USB cable
- 7 inch Adjustable wrist strap

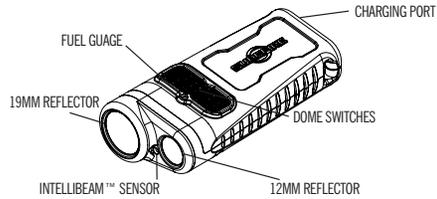

LIGHT OPERATION - PROFILE CONFIGURATION

The GUARDIAN has two dome switches. There are five different profiles with varying output options that can be selected depending on personal preference. From the factory, the GUARDIAN comes set to profile 1 which is also the default profile. Both LEDs cannot be activated simultaneously. For profiles with two or three output levels, press and release the dome switch in order to activate the first level. Press and release again within one second to switch to the next level. Repeat if the selected profile has a third output level. While the light is activated and more than one second passes, the subsequent switch press will deactivate the light.

	1st Output	2nd Output	3rd Output
PROFILE 1	High	Medium	Low
PROFILE 2	Low	Medium	High
PROFILE 3	Intellibeam Only		
PROFILE 4	Intellibeam	High	-
PROFILE 5	Momentary Only		

To switch between different profiles:

1. Enter configuration mode by holding both buttons down for three to five seconds. While the buttons are being held down, the Fuel Gauge LED will transition from solid orange to solid green. As soon as the LED turns to green, release both buttons. If held too long, the configuration mode will exit as indicated by a solid red LED.
2. Fuel Gauge will blink orange to indicate configuration mode is active.
3. Press left button to program the left LED or the right button to program the right LED.
4. The fuel gauge will turn green for left and red for right to indicate which side is being configured.
5. Press the appropriate button the corresponding number of times for the desired profile. Button presses more than five (max profile) will be ignored and profile 5 will be selected. For example: If the left button is pressed in step 3 and profile 2 is desired, press the left button two times. If the right button is pressed in step 3 and profile 2 is desired, press the right button two times.
6. To exit and save press the opposite side button for two seconds and release. The fuel gauge will blink the number of times for the profile selected and then it will exit out of configuration mode.
7. If no buttons are pressed for 30 seconds during this process then configuration mode will exit with nothing saved.

FUEL GAUGE

The GUARDIAN is equipped with an LED that lets you monitor the battery charge status, both during use and while charging. See FUEL GAUGE LIGHT INDICATOR shown below for an explanation of the LED colors and their meanings.

CHARGING THE GUARDIAN

The GUARDIAN is powered by an integral lithium-ion battery that will provide years of service, depending on use. The included USB-C cable can be plugged into a wall socket USB adapter or USB port.

To charge the lithium-ion rechargeable battery:

1. Insert USB-C cable plug into Guardian charging port receptacle.
2. Insert USB plug into USB port of a computer or another device that will provide power to the Guardian.
3. When fuel gauge LED turns green, the light is charged to more than 95% of battery capacity.

NOTE: Charging a fully depleted battery can take up to three hours. The light may be left plugged into the charger without damaging the battery.

NOTE: When the GUARDIAN is being charged and the temperature is too cold (Below 32°F/0°C) or too hot (Above 120°F/50°C), the fuel gauge will blink yellow which indicates charging stopped. Once the temperature reaches 41°F/5°C or 113°F/45°C, it will continue charging. When the battery is drained below 3.0V, the GUARDIAN has a pre-charge mode when connected to a charger. The Fuel Gauge will blink red rapidly until the battery reaches 3.3V. Once the battery has a minimum of 3.3V, the Fuel Gauge conditions below will apply.

FUEL GAUGE LIGHT INDICATOR	
SOLID GREEN	95-100% Charged
SOLID YELLOW	Battery Charge Low (reduce light output level or recharge)
SOLID RED	Recharge Immediately

CHARGING EXTERNAL DEVICES

The GUARDIAN can charge small devices such as smart phones with its 2,800 mAh lithium-ion battery. Simply connect the GUARDIAN to an external device using the included USB-C cable or another compatible USB device.

Output: 5 Volts.

Current range: 1.5-2A (0.5A from a USB 2.0 source.)

NOTE: The GUARDIAN can charge the STILETTO up to two times using a USB-C to MICRO-USB cable (not included).

BATTERY INFORMATION & WARNING

Do not attempt to remove or replace the GUARDIAN battery. Doing so will void the warranty. If the battery needs repair or replacement, contact Surefire at 714-545-9444. www.surefire.com/batteries.