



## Perun (Mini)

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

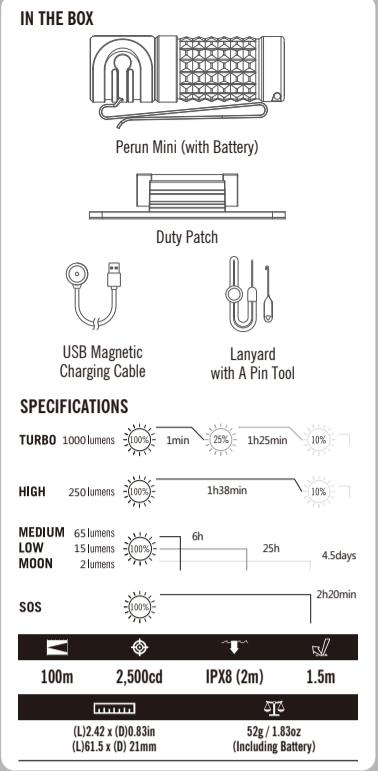

\* All performance measurements is according with ANSI/NEMA FLI-2000 standard. The test is performed using the battery included in the flashlight, and in measured condition at room temperature of 25 degrees Celsius with windless conditions. The runtime of turbo and high modes may vary depending on the external temperature and ventilation conditions, these biases may affect the results of testing.

## PRODUCT OVERVIEW

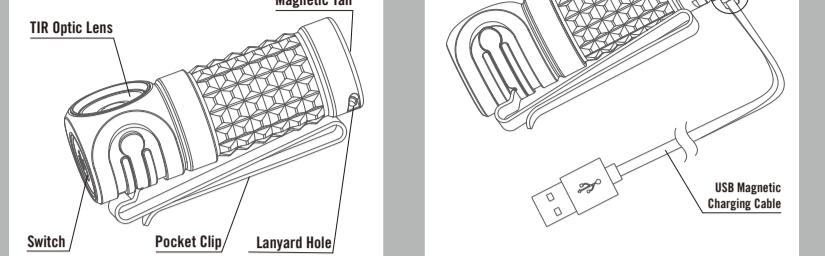


## SPECIFICATIONS


TURBO	1000lumens	1min	25%	1h25min	10%
HIGH	250lumens			1h38min	10%
MEDIUM	65lumens			6h	
LOW	15lumens			25h	
SOS	2lumens			2h20min	
100m	2,500cd	IPX8 (2m)	1.5m		
(L1.42 x D0.85cm (L1.45 x D0.85cm				52g / 1.8oz (including battery)	

## BEFORE FIRST USE

Unscrew the body and remove the yellow insulating film.


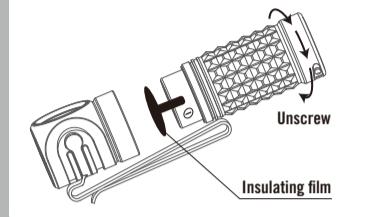


## CHARGING

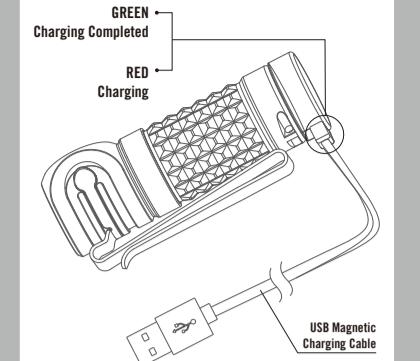

## LANYARD ATTACHMENT

Put the pin through the light lanyard hole and then hook the lanyard to the hole.

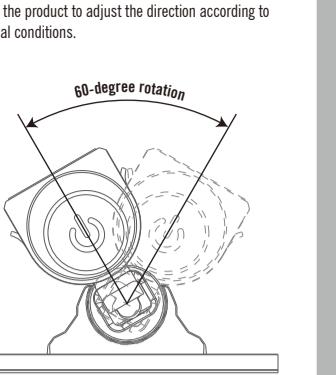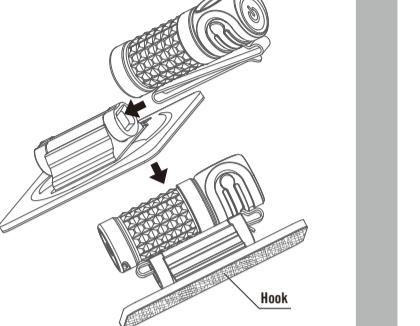

## HOW TO USE THE DUTY PATCH



 
## 1.

Place the product on the velcro duty patch, and insert the pocket clip into the hole of the velcro duty patch; attach it to clothes, backpacks or hats that have a similar velcro loop surface.



## 2.

Turn the product to adjust the direction according to actual conditions.



## DANGER

- DO NOT throw the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- The battery can only be charged while installed in the flashlight. When charging, please use the provided charger for your light.

## WARNING

- Keep out of reach of children.
- If the light is about to be put aside for a long time or be transported, please unscrew the body for half a circle to cut off the circuit.
- DO NOT activate the turbo mode multiple times continuously when the environmental temperature is high in case the flashlight body is too hot to hold.
- Ensure the battery is inserted with the negative (-) end pointing to the head of the light (LED side).
- Store the battery with care, if the battery needs to be changed, please take good care of the battery taken out. DO NOT mix it with the conductive metals.

## NOTICE

- Moonlight and turbo mode are not the normal brightness levels (low, medium, and high mode). Under moonlight and turbo mode, press and hold the switch to enter the normal brightness level cycle.
- When the light is turned on, the light will return to the last used setting. Only moonlight, low, medium, and high mode can be memorized when the light is turned off. If the light is turned off on turbo mode, it will revert to the medium setting after 10 minutes. SOS mode cannot be memorized.
- Active thermal management: On turbo mode, overheating can be avoided by adjusting the power output.
- Turbo mode will stay on for 1 minute and then step down to high mode within 30 seconds, only by 1-minute waiting, double click the switch will access turbo mode again.

## CONTENTS

(EN) English	01
(CHS) 简体中文	02
(FI) Finnish	03
(NO) Norwegian	04
(SV) Swedish	05
(NED) Nederland	06
(PL) Polska	08
(DE) Deutsch	09
(HU) Magyarország	10
(RU) Русский	12
(ES) Español	13
(RO) Romanește	15
(UA) Українська	16
(TH) ไทย	17
(FR) Français	18
(BG) Български	20
(IT) Italia	21
(SK) Slovenský jazyk	23
(JP) 日本語	24

## ( EN ) English

## HOW TO OPERATE

ON/OFF: When the light is not locked out, single click the switch to turn on/off.

CHANGE BRIGHTNESS LEVEL: When the light is on, press and hold the switch to cycle through the mode sequence moonlight (or turbo, SOS) - low - medium - high - low. The mode is selected when the switch is released.

MOONLIGHT MODE: When the light is off or in standby mode, press and hold the switch for one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode, quickly double click the switch to enter Turbo mode, and quickly double-click the switch again to exit Turbo mode. When the memorized mode is on high, quickly double-click the switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double click the switch to exit Turbo mode and switch to the previously memorized mode.

SOS: Quickly triple click the switch to access the SOS mode.

TIMER: The Perun Mini has a long (9 minutes) and short (3 minutes) timer. When the light is off, double click and hold the switch under the current brightness level to access the time settings. A single blink accesses the short timer while two blinks access the long timer. The flashlight will automatically turn off when the timer is up. After the timer is set, double click and hold the switch to shift the timer settings. Once the timer is up and the user is about to enter the timer again, the light will return to the last timer setting.

LOCKOUT: When the light is off, press and hold the switch for two seconds to access the button lockout mode. Under the lockout mode, press and hold the switch for less than two seconds without releasing it and the light will enter the moonlight mode again.

01

light will quit the moonlight mode once the switch is released and it will return to stand by at the button lockout mode.

BUTTON UNLOCK: Press and hold the switch for about two seconds until the light gives a single blink and then release the switch. The light will unlock and will return to the moonlight mode.

## ( CHS ) 简体中文

## 操作

开关机：非锁键状态下，单按开关按键开关机。

亮度调节：长按开关机，长按改变亮度，输出从当前亮度开始，按月光（或月光或SOS）→低→中→高→低顺序依次改变，释放按键时选定亮度。

开启月光：关机或待机状态下按住按键1秒以上，月光开启。

Turbo与返回：快速双按按键进入Turbo，再次双按返回。如记忆档为高亮档或中亮档，输出中亮。如记忆档为低亮或月光，输出中亮。亮码记忆档。

月光与返回：快按双按按键进入Turbo，再次双按返回。如记忆档为高亮或中亮，输出中亮。如记忆档为低亮或月光，输出中亮。亮码记忆档。

SOS：快速连续三次按键进入SOS模式。

定时开关机：单手有两定时对称功能，长定时（3分钟）。定时开关机，开机后，在当前亮度下，双按并锁定，输出闪一次为短定时，闪两次为长定时，计时结束自动关机。在计时过程中双按并锁定，保持转换定时设置。第一次定时结束后，再次进入定时设置，使用前次定时时间。

锁屏：关机状态下，长按（3秒）按键直至月光关闭，进入锁屏状态。锁定状态下，如短时（小于2秒）按住按键则输出月光，按按键释放后输出关闭，锁定仍保持在锁屏状态。

恢复：按住双按并锁定，输出闪三次为恢复进入月光状态。

SOS：快速连续三次按键进入SOS模式。

定时时关机：单手有两定时对称功能，长定时（3分钟）。定时开关机，开机后，在当前亮度下，双按并锁定，输出闪一次为短定时，闪两次为长定时，计时结束自动关机。在计时过程中双按并锁定，保持转换定时设置。第一次定时结束后，再次进入定时设置，使用前次定时时间。

锁屏：关机状态下，长按（3秒）按键直至月光关闭，进入锁屏状态。锁定状态下，如短时（小于2秒）按住按键则输出月光，按按键释放后输出关闭，锁定仍保持在锁屏状态。

恢复：按住双按并锁定，输出闪三次为恢复进入月光状态。

SOS：快速连续三次按键进入SOS模式。

恢复：按住双按并锁定，输出闪三次为恢复进入月光状态。

恢复：按住双按并锁定，输出闪三次为恢复进入月光状态。