

## THE SUREFIRE NO-HASSLE GUARANTEE

We'll do what it takes to keep your SureFire gear running smoothly. SureFire warrants that if you — our customer — purchase one of our products, and we determine that it is defective in material and/or workmanship during your lifetime, we will repair or replace it — no hassle!

Our warranty does not cover consumables or normal wear-and-tear — things like batteries draining, headbands and headpads wearing out, ink cartridges running out, and switches wearing out — or damage resulting from abuse, alterations, unauthorized repairs, or use contrary to SureFire's user manuals.

Should you need a replacement product, SureFire reserves the right to replace an obsolete product with a current production, like model. In the event that any issue with a SureFire product is not covered under this warranty SureFire can arrange to have the product repaired for a reasonable fee.

## STANDARD DISCLAIMER

Except as specified above or prohibited by applicable law: all express or implied conditions and warranties, including, without limitation, any implied warranty or condition of merchantability or fitness for a particular purpose, or accuracy of any informational content, are hereby excluded and disclaimed by SureFire; and in no event will SureFire be liable for any special, direct, indirect, consequential, incidental or punitive damages howsoever arising and regardless of the theory of liability, even if advised of the possibility of such damages. Products, prices, availability, specifications, and offers are subject to change or cancellation at any time without notice.

## WARRANTY CLAIMS

For claims, contact Customer Service at 714-545-9444 to obtain a Return Merchandise Authorization number (RMA#). Then package the unit carefully and send to (no CODs):

SureFire, LLC.  
Repairs Department, RMA# \_\_\_\_\_  
17680 Newhope Street, Suite B  
Fountain Valley, CA 92708

SureFire will pay any reasonable shipping costs to return the unit to you.



### BATTERY INFORMATION & WARNING

Do not attempt to remove or replace the STILETTO PRO battery. Doing so will void the warranty. If the STILETTO PRO needs to be repaired, contact SureFire at 714-545-9444 or [technicalsupport@surefire.com](mailto:technicalsupport@surefire.com).



Revision B 10-2019  
71-01-1090  
PLR-B


18300 MT. BALDY CIRCLE  
FOUNTAIN VALLEY, CA 92708-6122  
SUREFIRE.COM



SUREFIRE

## STILETTO<sup>PRO</sup>

MULTI-OUTPUT RECHARGEABLE POCKET LED FLASHLIGHT  
PLR-B

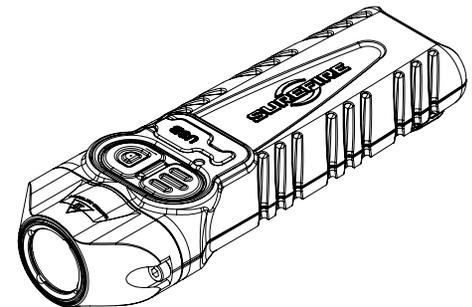

SPECIFICATIONS		STILETTO PRO
OUTPUT	Low: 25 Med: 300 High: 1,000 lumens	
RUNTIME	Low: 23.5 Med: 1.5 High: 1.0 hours	
STROBE RATE	Tactical Switch: 9 Emergency: 3-4 Hz	
PEAK BEAM INTENSITY	5,100 candela	
DISTANCE	142 meters	
CONSTRUCTION	Aluminum	
FINISH	Black	
WEIGHT (w/batteries)	4.0 oz (113 g)	
LENGTH	4.5 in (11.4 cm)	
BEZEL DIAMETER	0.87 in (2.2 cm)	
BATTERIES	Lithium polymer rechargeable (integrated)	
SWITCHING	Primary, Tactical, and Programming	
LIQUID INGRESS PROTECTION	IPX7	


All performance claims tested to ANSI/NEMA FL1-2009 Standard.

USER MANUAL

# STILETTO<sup>PRO</sup>

## KIT CONTENTS

- STILETTO PRO
- USB-TO-MICRO USB cable
- T8 Torx Wrench

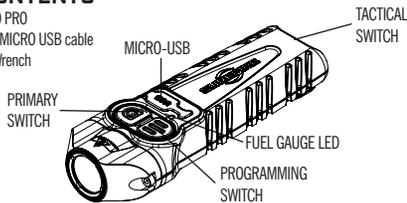

## LIGHT OPERATION - PROFILE CONFIGURATION

PRIMARY switch: activates the light in the various outputs

PROGRAMMING switch: see "HOW TO CHANGE PRIMARY AND TACTICAL MODES"

TACTICAL switch: for momentary, strobe or constant-on output

### Primary Switch Activation

**Mode 1 (Default):** Press the PRIMARY switch to cycle from LOW to MEDIUM to HIGH to OFF. The cycle will repeat if the PRIMARY switch is pressed within two seconds. If the STILETTO PRO is activated on either LOW, MEDIUM or HIGH and the PRIMARY switch has not been pressed within two seconds, the next press shuts the light OFF. The last used output is not remembered.

**Mode 2:** Same as above, but with the cycle changed to HIGH to MEDIUM to LOW to OFF.

### Tactical Switch Activation

**Mode 1 (Default: TACTICAL & STROBE):** Press and hold the TACTICAL switch for HIGH only; release the switch to shut OFF. For STROBE, rapidly tap the TACTICAL switch three or more times and hold down on the 3rd+ press. Release the switch to shut the STROBE OFF.

**Mode 2 (Constant-on):** Press the TACTICAL switch for constant-on in HIGH only. When the switch is pressed again, the light will shut OFF.

### EMERGENCY MODE Activation

Press and hold the PROGRAMMING switch for five seconds or more to activate the MEDIUM frequency, MEDIUM output. STROBE. Press the PRIMARY or TACTICAL switch to shut EMERGENCY MODE OFF.

## HOW TO CHANGE PRIMARY AND TACTICAL MODES

The PROGRAMMING switch is used to select the behavior of the PRIMARY and TACTICAL output buttons. The STILETTO must be off to change modes. The PRIMARY and TACTICAL switches are changed independently (Ex: PRIMARY switch can be on MODE 1 and TACTICAL switch can be on MODE 2.)

### Changing the modes for either the PRIMARY or TACTICAL switches:

Step 1: Press and hold the PROGRAMMING switch for two to five seconds. The Fuel Gauge LED will illuminate BLUE to indicate programming mode.

Step 2: While holding the PROGRAMMING switch and observing the BLUE LED Fuel Gauge, tap either the PRIMARY or TACTICAL switch once and release the PROGRAMMING switch. Pressing the PRIMARY or TACTICAL switch more than ONCE exits the programming mode. Once the PROGRAMMING switch is released, the Fuel Gauge LED blinks GREEN three times for success or RED three times for error.

## LOCKOUT MODE

### To Enable Lockout Mode

1. Press and hold the PRIMARY and TACTICAL switch simultaneously for two seconds, then release.
2. The green Fuel Gauge LED will blink twice to confirm Lockout Mode is enabled.

*NOTE: The PRIMARY, TACTICAL and PROGRAMMING switches will not activate the STILETTO PRO when Lockout Mode is enabled.*

### To Disable Lockout Mode:

1. Press the PRIMARY and TACTICAL switch simultaneously, then release.

*NOTE: The PRIMARY, TACTICAL and PROGRAMMING switches will be instantly ready for use when Lockout Mode is disabled.*

FUEL GAUGE LED INDICATOR		
	CHARGING	DISCHARGING
SOLID GREEN	100% Charged, Max Capacity	95-100% Charged
SOLID YELLOW	Charging, Medium Capacity	Battery Charge Low (reduce light output level or recharge)
SOLID RED	Charging, Low Capacity	Recharge Immediately
FLASHING RED	Pre-charge mode	Battery Critically Low

## POCKET CLIP RELOCATION

1. Rotate T8 Torx screws counter clockwise with supplied wrench to remove the two pocket clip screws.
2. Place pocket clip on STILETTO PRO body in desired position.
3. Rotate T8 Torx screws clockwise with supplied wrench. Tighten screws to 1.4 inch pounds of torque. If torque wrench is not available, tighten screws an additional 1/4 turn once resistance is felt. DO NOT OVERTIGHTEN. The STILETTO PRO body is die cast aluminum. If the screws are overtightened, the screw holes can become stripped, which could void the warranty.

## FUEL GAUGE

The STILETTO PRO is equipped with a LED that displays the battery status, both during use and while charging.

## CHARGING THE STILETTO PRO

The STILETTO PRO is powered by an integral lithium polymer (LiPo) battery (950 mAh). The STILETTO PRO's MICRO USB port is for charging input only (Standard 5V, 500 mA).

### How to charge the LiPo rechargeable battery:

1. Insert the MICRO USB cable plug into STILETTO PRO charging port.
2. Insert USB cable plug into a USB port of a computer or another device that will provide power to the STILETTO PRO.
3. When the fuel gauge turns green, the STILETTO PRO is charged to more than 95% of battery capacity.

*NOTE: The SureFire FIREPAK™ and GUARDIAN® will charge the STILETTO PRO approximately two times.*

*NOTE: Charging a fully depleted battery can take up to three hours. The light may be left plugged into the charger without damaging the battery.*

*NOTE: When the STILETTO PRO is being charged and the temperature is too cold (Below 32°F/0°C) or too hot (Above 120°F/50°C), the fuel gauge will blink yellow which indicates charging stopped. Once the temperature reaches 41°F/5°C or 113°F/45°C, it will continue charging. When the battery is drained below 3.0V, the STILETTO PRO has a pre-charge mode when connected to a charger. The Fuel Gauge will blink red rapidly until the battery reaches 3.1V. Once the battery has a minimum of 3.1V, the Fuel Gauge conditions above will apply.*

### ⚠ STROBE WARNING

Exposure to strobing lights may cause dizziness, disorientation, and nausea. A very small percentage of people suffer from photosensitive epilepsy—approximately .00025% of the population—and may experience seizures or blackouts triggered by strobing lights. Visit [www.epilepsyfoundation.org](http://www.epilepsyfoundation.org) for more information about this rare form of epilepsy. Anyone who has had symptoms linked to this condition should consult a doctor before using this product.