

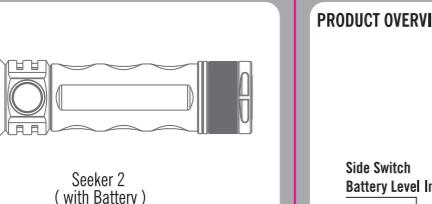


OLIGHT

USER MANUAL

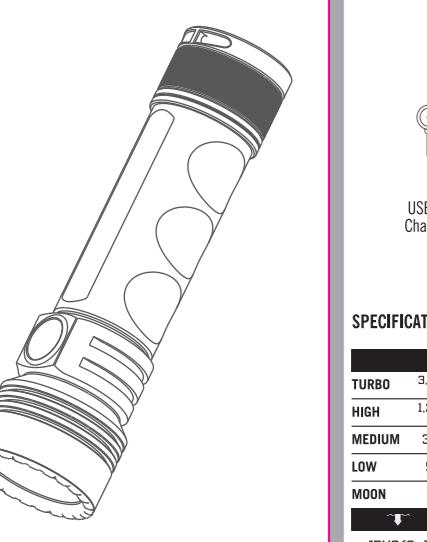

IN THE BOX

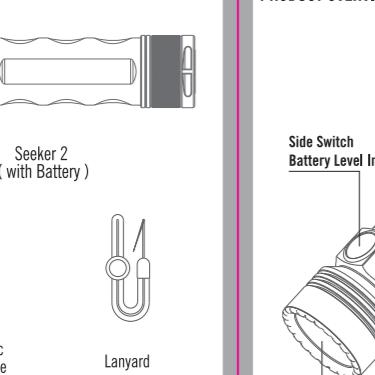

SPECIFICATIONS

	3*	1*	5*	10*	20*	50*	100*	200*	500*	1000*	2000*	5000*	10000*
TURBO	3,000lm	1,000lm	3-155mins	220m	12,000cd								
HIGH	1,200lm	>600lm	110-50mins	135m	4,550cd								
MEDIUM	300lumens		13h	68m	1,150cd								
LOW	50lumens		72h	28m	190cd								
MOON	Slimes	15days	10h	25cd									
	IPX8 (2m)	IPX8 (0.1m)											
BODY MATERIAL:	AL6061-T6 aluminum alloy.												


* All performance measurements in accordance with ANSI/NFPA FL1-2009 standards.

* The minimum output at Turbo and high mode is 600 lumens.


Seeker 2

Thank you for purchasing this Olight Product. Before use, please read the manual carefully!

PRODUCT OVERVIEW

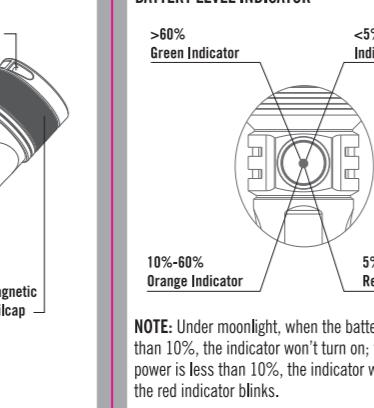

BEFORE FIRST USE

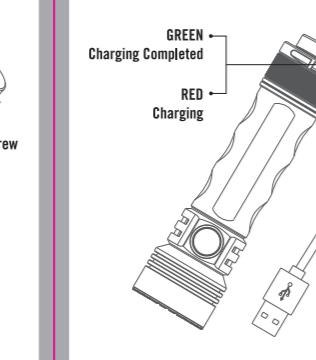

* Connect the magnetic USB end of the charging cable (MOCIA) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 6 hours to fully charge the light.

* Before first use please fully charge the product.

01

02

CONTENTS

(EN) English

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium, and high modes can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode, the strobe mode cannot be memorized).

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, and high modes. The mode is selected when the side switch has been released.

MOONLIGHT: When the flashlight is off, press and hold the side switch for about one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode, quickly double-click the side switch to exit Turbo mode. When the memorized mode is Low, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double-click the side switch to exit Turbo mode and switch to the previously memorized mode.

STROBE: When the flashlight is on, triple-click the side switch to activate strobe mode. To quit this mode, single click the side switch to deactivate strobe mode. To quit this mode, single click and quickly double-click the side switch again to exit Turbo mode. When the memorized mode is Low, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double-click the side switch to exit Turbo mode and switch to the previously memorized mode.

TEMPORIZATOR: Seeker 2 tiene un temporizador largo (9 minutos) y corto (3 minutos), cuando se necesita la luz la apaga automáticamente para acceder al modo Turbo, pero a iesi en modo Turbo, apaga el temporizador de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

IMZHENIY UROVNA YARKOSTI: Cuando el faro se enciende, apaga la lámpara y la lámpara se enciende de nuevo. Si el faro se apaga, la lámpara se apaga y se enciende de nuevo. El faro se apaga automáticamente para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

PRIMY DOSTUP K TURBO REJIMU: Cuando el faro se enciende, el temporizador se apaga para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

STROBOSKOP: Triple-click the button lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

VAIHDAA KIRKAUSTAUSO: Kun tuskalämpä on päällä, paina

INDICATOR

(CHS) 简体中文

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium, and high modes can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode, the strobe mode cannot be memorized).

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, and high modes. The mode is selected when the side switch has been released.

MOONLIGHT: When the flashlight is off, press and hold the side switch for about one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode, quickly double-click the side switch to exit Turbo mode. When the memorized mode is Low, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double-click the side switch to exit Turbo mode and switch to the previously memorized mode.

STROBE: Haga triple click sobre el botón lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

IMZHENIY UROVNA YARKOSTI: Cuando el faro se enciende, apaga la lámpara y la lámpara se enciende de nuevo. Si el faro se apaga, la lámpara se apaga y se enciende de nuevo. El faro se apaga automáticamente para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

PRIMY DOSTUP K TURBO REJIMU: Cuando el faro se enciende, el temporizador se apaga para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

STROBOSKOP: Triple-click the button lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

VAIHDAA KIRKAUSTAUSO: Kun tuskalämpä on päällä, paina

INDICATOR

(CHS) 简体中文

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium, and high modes can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode, the strobe mode cannot be memorized).

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, and high modes. The mode is selected when the side switch has been released.

MOONLIGHT: When the flashlight is off, press and hold the side switch for about one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode, quickly double-click the side switch to exit Turbo mode. When the memorized mode is Low, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double-click the side switch to exit Turbo mode and switch to the previously memorized mode.

STROBE: Haga triple click sobre el botón lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

IMZHENIY UROVNA YARKOSTI: Cuando el faro se enciende, apaga la lámpara y la lámpara se enciende de nuevo. Si el faro se apaga, la lámpara se apaga y se enciende de nuevo. El faro se apaga automáticamente para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

PRIMY DOSTUP K TURBO REJIMU: Cuando el faro se enciende, el temporizador se apaga para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

STROBOSKOP: Triple-click the button lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

VAIHDAA KIRKAUSTAUSO: Kun tuskalämpä on päällä, paina

INDICATOR

(CHS) 简体中文

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium, and high modes can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode, the strobe mode cannot be memorized).

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, and high modes. The mode is selected when the side switch has been released.

MOONLIGHT: When the flashlight is off, press and hold the side switch for about one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode, quickly double-click the side switch to exit Turbo mode. When the memorized mode is Low, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double-click the side switch to exit Turbo mode and switch to the previously memorized mode.

STROBE: Haga triple click sobre el botón lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

IMZHENIY UROVNA YARKOSTI: Cuando el faro se enciende, apaga la lámpara y la lámpara se enciende de nuevo. Si el faro se apaga, la lámpara se apaga y se enciende de nuevo. El faro se apaga automáticamente para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

PRIMY DOSTUP K TURBO REJIMU: Cuando el faro se enciende, el temporizador se apaga para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

STROBOSKOP: Triple-click the button lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

VAIHDAA KIRKAUSTAUSO: Kun tuskalämpä on päällä, paina

INDICATOR

(CHS) 简体中文

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium, and high modes can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode, the strobe mode cannot be memorized).

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, and high modes. The mode is selected when the side switch has been released.

MOONLIGHT: When the flashlight is off, press and hold the side switch for about one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode, quickly double-click the side switch to exit Turbo mode. When the memorized mode is Low, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double-click the side switch to exit Turbo mode and switch to the previously memorized mode.

STROBE: Haga triple click sobre el botón lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

IMZHENIY UROVNA YARKOSTI: Cuando el faro se enciende, apaga la lámpara y la lámpara se enciende de nuevo. Si el faro se apaga, la lámpara se apaga y se enciende de nuevo. El faro se apaga automáticamente para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

PRIMY DOSTUP K TURBO REJIMU: Cuando el faro se enciende, el temporizador se apaga para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

STROBOSKOP: Triple-click the button lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

VAIHDAA KIRKAUSTAUSO: Kun tuskalämpä on päällä, paina

INDICATOR

(CHS) 简体中文

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium, and high modes can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode, the strobe mode cannot be memorized).

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, and high modes. The mode is selected when the side switch has been released.

MOONLIGHT: When the flashlight is off, press and hold the side switch for about one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode, quickly double-click the side switch to exit Turbo mode. When the memorized mode is Low, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double-click the side switch to exit Turbo mode and switch to the previously memorized mode.

STROBE: Haga triple click sobre el botón lateral para acceder al modo strobo. Para quitarlo, presione el botón lateral una vez.

IMZHENIY UROVNA YARKOSTI: Cuando el faro se enciende, apaga la lámpara y la lámpara se enciende de nuevo. Si el faro se apaga, la lámpara se apaga y se enciende de nuevo. El faro se apaga automáticamente para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.

PRIMY DOSTUP K TURBO REJIMU: Cuando el faro se enciende, el temporizador se apaga para acceder al modo Turbo, pero a iesi en modo Turbo, el temporizador se apaga de nuevo. La lámpara apagada solo recuerda el modo que se memorizó.